

GS503 Elderly Phone

User Manual



This model is with Location-based service, SIM with GPRS is required

1. Phone overview




2. Definition of Keys

Buttons	Function
Dial/Confirmation Key	Dial Pick up At standby mode: Enter into calling log At operation: To be a confirmation key
Power on/off End/Delete Key	When power off: Long press to turn on When power on: Long press to turn off At operation: Return to upper menu interface / Long press to return at standby interface
Navigation Up / Main menu Key	At standby mode: Enter into main menu At operation: Move up the cursor
Navigation Down / Phone Book Key	At standby mode: Enter into phone book At operation: Move down the cursor
# Key	When edit: Switch smart input
* Key	When edit: Insert common symbol
Tone Key	“+” Enhance volume “-” Reduce volume
FM Key	At standby mode: Turn on the radio When radio on: Turn off the radio
Torch Key	Push up to turn on Push down to turn off
Keypad Lock	Push up to unlock Push down to lock
Hand-free key	Long press to switch to Loudspeaker/Handset mode
SOS key	Long press to make an emergency call

3. Getting Start

Install SIM

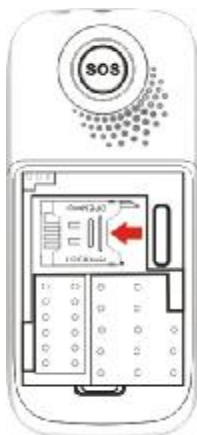

Install Battery



Long Press  to Turn on

4. Other Function

4.1 Torch

Push up the torch key to turn on the light, there is no matter with whether the mobile is on or off.

4.2 Keypad Lock

Move down: Lock

Move up: Unlock

5. Functional Menu

5.1 Phone Book

5.1.1 View Record: View the saved mobile number

5.1.2 Search Contact: To find the contact by names

5.1.3 Add New Contact:【Enter into option】→【Select “Add new contact to SIM card or mobile phone”】→【input contact name and cell phone numbers】→After inputting the information, press the hang off key to save and then press confirmation key to confirm.

5.1.4 Delete Contact: The contact information can be all deleted or single deleted from SIM card or mobile phone.

5.1.5 Copy Phonebook: Providing two ways of copying phonebook: from mobile to SIM card and from SIM card to mobil.

5.1.6 Memory Status: 50 numbers can be saved in mobile phone, 50 numbers can be saved in SIM card.

5.2 SOS

5.2.1 SOS Number Setting: Three SOS Number could be set

Select 【SOS】→ SOS Number Setting → Select the number from the phonebook

5.3 Fast-dail

Long press the number key 1~9 so as to dial the familiarity number/the corresponding phone number quickly.

Set familiarity number: Can set 3 familiarity numbers, corresponding number key is 1~3.

Set fast dial number: Can set 6 numbers, corresponding number key 4~9.

Setting method: Select 【One key call】→ 【Set familiarity number】 / 【Set fast dial number】 .

Directly invoke the right number you want to set from phonebook.

5.4 Messaging

5.4.1 New Message

5.4.2 Inbox

5.4.3 Outbox

5.4.4 Delete Message

5.4.5 Saving Message to: SIM/Phone

5.4.6 Memory Status: Maximum items at Phone/40

Maximum items at SIM/50

5.5 Call History

5.5.1 To show Missed Calls / Dialed Calls / Received Calls

5.5.2 The Call Logs could be deleted.

5.6 Settings

5.6.1 Phone Setup

● Date and Time

Time Zone Setting: Select a time zone

Set time

Set date

Note: The first time successfully locating by GPS, time zone, date, time will be automatically adjusted. While under the circumstance that GPS cannot locate successfully, the time zone, date, time will need to be manually adjusted.

Time Format Setting: 12 hours / 24 hours

- Language: English / Simplified Chinese
- Input Method: Simplified Chinese / Smart ABC / Multi tap ABC / Multi tap abc / Numeric / Smart PinYin
- LCD Backlight
 - Brightness: Adjust the brightness
 - Time (Seconds): Adjust the time of screen lighting
- LCD Contrast: Adjust the extent

5.6.2 Sounds & Alerts

● Ring tone

Incoming calls : 25 groups of ringtone could be selected

Power on: 7 groups

Power off: 7 groups

Message tone: 11 groups

Key tone: Silent / Click / Tone

● Volume

Ringtone: Turn the ringtone up or down.

Keypad tone: Turn the keypad tone up or down.

● Warning tone type

The warning tone type for option: Ring only/Vibrate only/ Vibrate and ring/Ring after vibrate/Quiet only.

5.6.3 Reset to the factory settings: Enter password 1122 to reset the factory settings.

5.7 FM Radio

No matter whether your mobile phone install SIM card or not, you can always listen to the radio. In addition, no matter whether install earphone or not, you also can listen to it. When installing, the sound will be given off from earphone, or else the sound will be given off openly.

5.7.1 Turn on the radio: In standby status, press FM key to turn on the radio.

5.7.2 Turn off the radio: In radio operation interface, press FM key to turn off the radio.

5.7.3 Operating procedure: After turn on the radio you will enter into listening interface. Press navigator up and down key to set the frequency channel. Add or reduce 0.1 for each time by press navigator up or down key once. You can also input the frequency directly, press call key in listening interface to select **【manually input】** menu to input frequency manually, select **【automatically search】** menu to search frequency channel by phone automatically. Select **【Frequency channel list】** to search often used channel, press * key in listening interface to listen last channel and # for the next one.

6. Monitor

SOS numbers can send SMS command to monitor.

SMS command: MONITOR#

Note: SOS number is not equal to familiarity number.

After the mobile get reply Ok, then it will dial the SOS number. Once the call gets through, it enters monitor status.

7. SOS emergency call

Press SOS key for more than 3 s (will active GPS function automatically), the phone will vibrate twice, then the phone will

Example.: EURL,<http://maps.googlemaps.com/maps?q=#>
"<http://maps.googlemaps.com/maps?q=>" is the google map link.

10. Platform check

Senior phone will send location data to platform after power on. You can check its location in platform.

Platform website: en.coomix.net

Note: When the sms inbox is full, the phone can not receive any new sms any more. In this case, please delete the inbox sms first.